


BP-54 Big Blue Jr./ AIR HYDRAULIC RIVETER

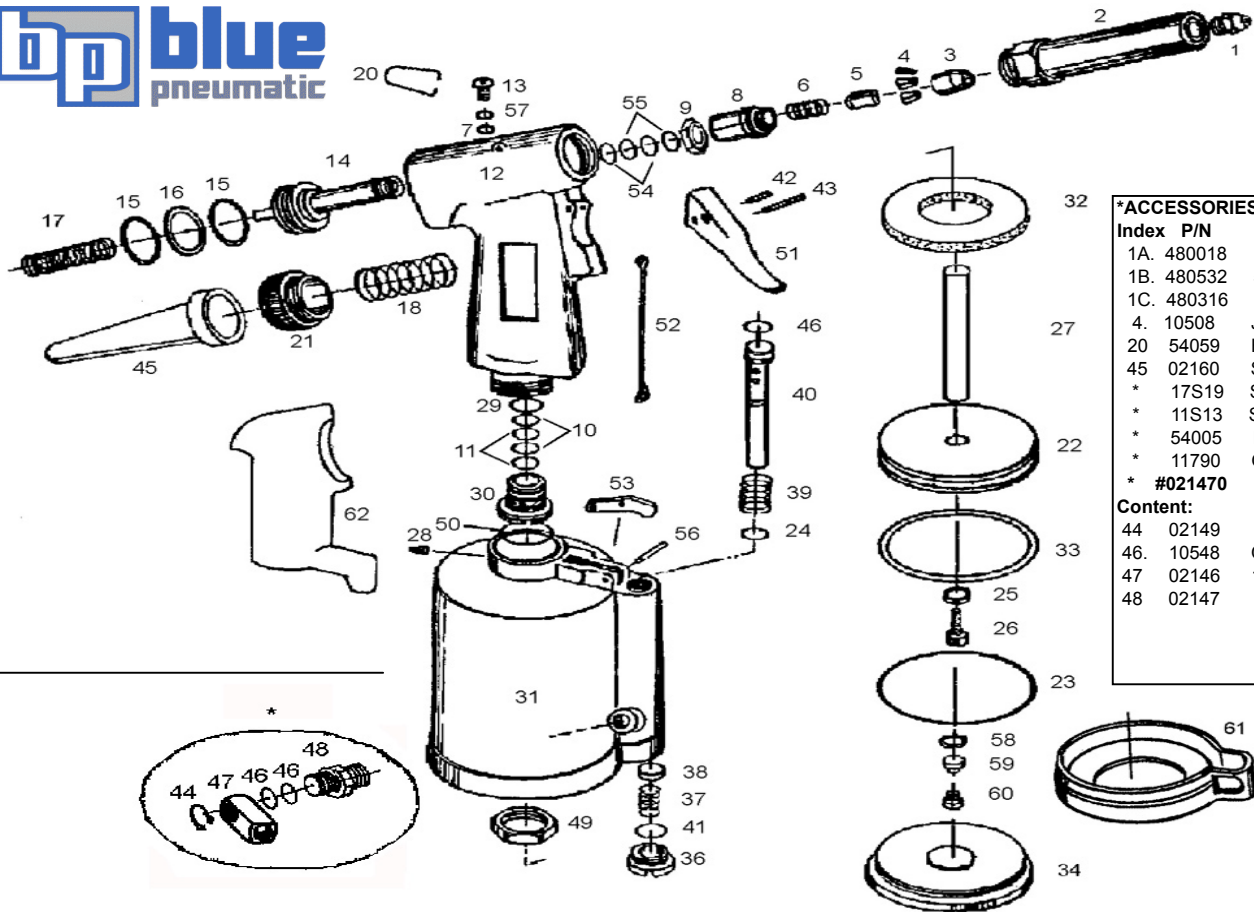

*ACCESSORIES :		
Index	P/N	Description
1A.	480018	1/8" Nosepiece
1B.	480532	5/32" Nosepiece
1C.	480316	3/16" Nosepiece
4.	10508	Jaws (10408)(3pcs/set)
20	54059	Hanging Ring
45	02160	Safety Cap
*	17S19	Spanner (17/19mm)X2
*	11S13	Spanner (11/13mm)
*	54005	Hex. Wrench
*	11790	Oil Syringe
* #021470 Universal Joint Kit		
Content:		
44	02149	Retaining Ring
46.	10548	O-Ring Seal (2)
47	02146	1/4" Air Inlet Fitting
48	02147	Air Inlet Plug

1025-1/1/06

Index No.	Part No.	Description	Index No.	Part No.	Description	Index No.	Part No.	Description
1D	A6622H	1/4" Nosepiece	22	02123	Piston Disc	42	02168H	Pin
2	54015	Head	23	10431	O-Ring Seal	43	02169	Pin
3	54009	Jaw Housing	24	11560	O-Ring Seal	46	10548	O-Ring Seal
4	10508	Jaws (10408) (3)	25	76527	Spring Washer	49	02121	Lock Nut
5	11507	Jaw Pusher	26	10427	Piston Head Lock Screw	50	02170	O-Ring Seal
6	500005	Spring	27	02122	Plunger Rod	51	02138	Trigger
7	02197	O-Ring Seal	28	02172	Set Screw	52	54033	Trigger Rod
8	54006	Jaw Housing Coupler	29	25022	O-Ring Seal	53	02134	Trigger Lever
9	54004	Nut	30	02157	Screw Plug	54	11554	X-Ring Seal (2)
10	11520	X-Ring Seal (2)	31	54001	Air Cylinder Body	55	11502	X-Ring Washer (2)
11	11558	O-Ring Washer (2)	32	02130	Damping Ring	56	02167	Pin
12	54002	Hydraulic Section	33	02124	Air Piston Ring	57	400017A	Fill Washer
13	02171	Oil Plug	34	54003	Air Cylinder Cap	58	19314	Retaining Ring
14	54051	Hydraulic Plunger	36	10550	Screw Plug	59	19312	Rubber Plate
15	11501	O-Ring Seal (2)	37	10544	Valve Pressure Spring	60	19313	Spring
16	11549	Washer	38	11542	Valve Plate (10442)	61	54070	Rubber Cushion
17	02152	Return Spring	39	11541	Valve Spring	62	54061	Hand Grip
18	02153	Return Spring	40	02139	Valve Tube	*	#021470	Universal Joint Kit
21	54010	Screw Plug	41	31413	O-Ring Seal			2.8/set