





1 - Confirm Insert Compatibility and Setup

With the tool disconnected from the air source, thread the insert onto the mandrel until it touches the anvil nut. Make sure that the mandrel is long enough to allow one full thread to extend past the insert. To simplify set up, be sure measurement is based on the longest insert you will be installing during that installation session. To make this adjustment loosen the lock nut on the anvil nut. Thread the anvil nut in or out to adjust the amount of exposed mandrel. Tighten the lock nut on the anvil nut after the adjustment is made.

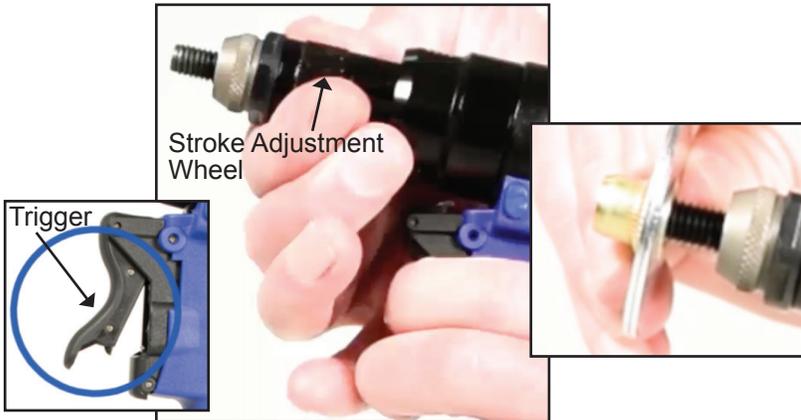


2 - Adjust Stroke

Connect the tool to the air source. Make sure to operate tool at the appropriate recommended air pressure (60-110 psi.). Pull and hold the trigger. Rotate the stroke adjustment wheel to shorten or lengthen the stroke. The stroke is properly adjusted when the insert is fully collapsed when the mandrel automatically reverses and spins out of the insert. Adjustment is a trial and error process. Repeat the adjustment sequence as needed for final adjustment.

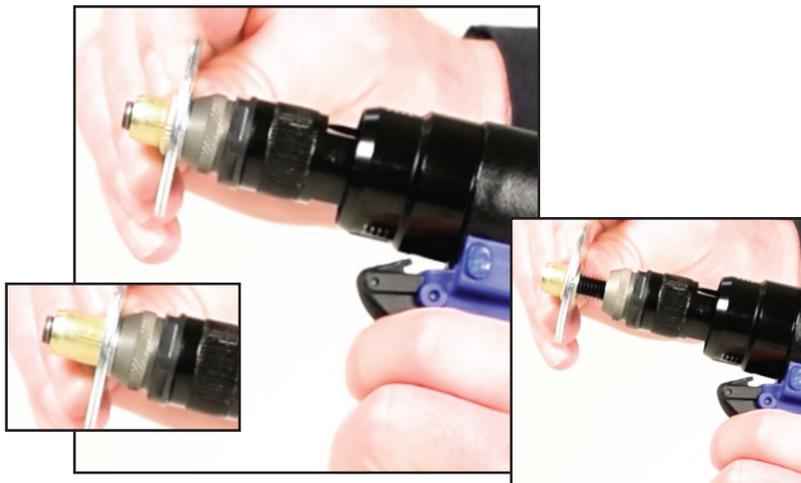

3 - Set the insert in your workpiece

Connect the tool to the air source. Make sure to operate tool at the appropriate recommended air pressure (60-110 psi.). Press the insert on to the mandrel with light pressure. The pressure sensitive mandrel will thread the insert on to the mandrel until it touches the anvil nut. Place the insert through the hole in the workpiece. Pull and hold trigger to install and collapse the insert in the workpiece (do not release the trigger). Continue to hold trigger to spin the mandrel out of the installed insert.

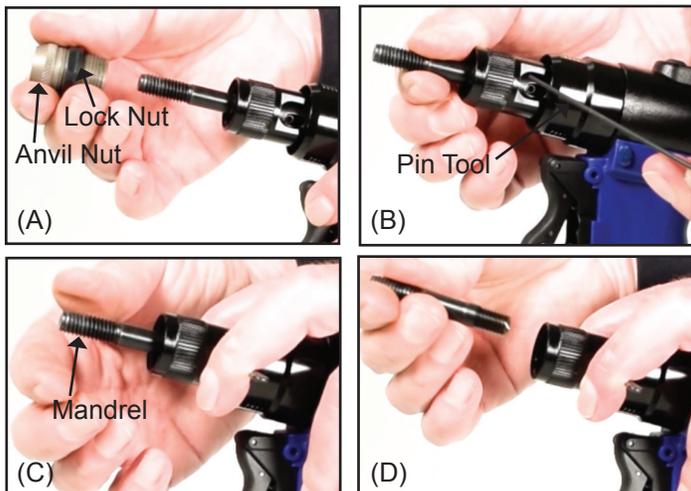

4 - Easy Mandrel Change

- 1 - Remove the anvil nut from the nose assembly. fig (A)
- 2 - Insert pin tool into the internal hexagon bit. fig (B)
- 3 - Pull back on the pin tool away from the mandrel. Rotate the mandrel and thread out of the nose assembly. fig (C) (D)
- 4 - Thread the new mandrel into the nose assembly while still pulling back on the hexagon bit pin tool. When the mandrel becomes slightly snug release the pin tool (do not remove pin tool). fig (D) (C)
- 5 - Rotate the mandrel slightly back and forth until the internal hexagon bit sets into the end of the mandrel. A faint click will be heard and you will feel that the mandrel is now locked in place when rotating it.
- 6 - Remove the pin tool and install the anvil nut and lock nut. fig (B) (A)



Limited Warranty

Blue Pneumatic brand tools are warranted to be free from defects in materials and workmanship. Tools thought to be defective should be returned to the factory or an authorized service center or authorized distributor, where it will be examined for repair and or replacement.

This warranty does not cover damage to tools that arise from abuse, alteration or the tool being used for anything other than its intended use. Repair and replacement will not apply in the previously stated circumstances.

The duration of the warranty and any other warranty including, but not limited to, any implied warranty of merchantability is expressly limited to one year beginning from the date of delivery to the original user. The obligation of Blue Pneumatic brand tool distributors under any warranty, express or implied, is limited solely to repair or replacement from its distributor network or factory.

Important Safeguards

READ THIS INSTRUCTION MANUAL CAREFULLY AND FULLY UNDERSTAND ALL THE INFORMATION PROVIDED PRIOR TO USING THIS TOOL.

1 - Always inspect, maintain, and operate this tool in accordance with American National Standards Institute (ANSI) Standard B186.1 (Safety Code for Portable Air Tools), and any other applicable codes or standards regarding the safe operation of compressed air tools.

2 - In order to provide maximum tool life, performance, and safety, operate this tool at 85 - 110 PSI / 5.86 - 7.58 bar max. air pressure, using dry air and a 3/8" / 9.5 mm hose. Always lubricate the tool per the manufacturer's specifications prior to operation, or use an inline oiler with proper filtration.



3 - Always wear impact-resistant eye and / or face protection when operating or servicing this tool. Visitor's spectacles or home grade safety glasses are not adequate for power tool applications.



4 - Always use hearing protection approved by OSHA or NIOSH. Lack of proper protective gear in high-noise environments can lead to permanent loss of hearing.

5 - Always keep the tool in utmost operating condition. Lubricate and wipe down the tool after each use. Inspect for leaks, damage to the body, or binding and/or broken moving parts.

6 - Air under pressure can cause severe injury, or possibly death, if care is not taken when using compressors, air tools, air reservoirs, and pneumatic plumbing.

7 - Always turn off the air supply, drain water from the air line, and detach the tool from the air supply prior to removing, installing, or adjusting any part of this tool. Inspect for frayed hose ends and damaged fittings. Replace any damaged items immediately. Do not use quick-detach couplings at the tool – see operating instructions for correct setup. NEVER carry the tool by the hose.



8 - Slips or falls while operating air tools can result in serious injury or death. Keep excess hose away from walkways and working areas.

9 - Air tools can vibrate during use. Vibration and repetitive motions over extended periods of time can cause injury to hands, joints, neck, and back. Immediately stop using the tool if discomfort or pain occurs. Consult a medical professional before resuming tool use.

10 - Always place the tool on the workpiece prior to starting the tool. Keep body stance balanced and firm while operating the tool and do not overreach.

11 - Keep away from the rotating end of the tool. Do not wear jewelry or loose clothing. Secure long hair and beards away from the work area. Do not wear pendant neckwear of any kind while operating rotating equipment.

12 - Tool shaft may continue to spin after the trigger is released. Avoid direct contact with tool end accessories during use. If using gloves for cushioning or heat protection, USE EXTREME CAUTION. Gloves can bind with moving parts and result in injury or amputation.

13 - Do not lubricate the tool with flammable fluids such as kerosene, diesel, jet fuel, or aromatic spirits.

14 - Do not force the tool to operate beyond its rated capacity.

15 - Do not remove any labels, tags, or warning stickers. Replace any damaged labels prior to putting the tool in service.